

KEEPIN' IT SCRATCH-FREE AND SHINY



Wrapping pros all over the world use them: felt tips or sleeves that help your squeegee slide smoothly, called "buffers". But what is a good solution when installing high gloss films? And what about chrome and mirror films? Scratches do happen. SOTT has the solution: the WrapEdge, made of soft, structureless alcantara. Available in 4 types. These "buffers" do exactly what every installer and wrapper wants, because each type of WrapEdge has a preferred application.

HIGH GLOSS PVC FILM



Many installers have experienced that squeegeeing high gloss films (especially dark colours) causes scratches.


WrapEdge helps to avoid that! Because the middle layer absorbs and retains moisture, you can wet it with some soapy water and presto! the world's best squeegee is a fact. Your squeegee suddenly slides perfectly over the vinyl while the pressure is evenly distributed and the film is superbly applied with no issues whatsoever.

MIRROR FILMS?



Chrome film, polyester film or mirrored film - they all have one thing in common: they easily scratch when you install them. Wouldn't it be nice if you could simply squeegee them down and not have to worry about scratching?

VARIOUS THICKNESSES

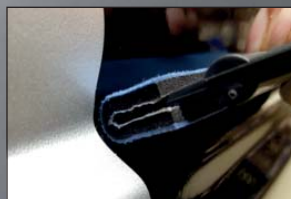

The WrapEdge buffers have a sponge middle layer that serves **3 functions:**

1: It holds moisture so it can contain the soapy water for wet squeegeeing. **2:** Wet installing of window film becomes a breeze, because the sponge layer absorbs the squeezed-out moisture at the edge. **3:** The thickness of this layer ensures an even pressure distribution when squeegeeing and flawlessly follows the channels and other recesses of the vehicle body parts when the film is pushed in.



WrapEdge

The WrapEdge buffers are available in 4 different types, each one for a specific application. Check the back for more information.

watch the video here:



WrapEdge™

The 4 different WrapEdge buffers are all made of high-quality, structure-free alcantara. The difference mainly lies in the moisture-absorbing middle layers, which perfectly serve as a moisture reservoir to prevent scratching when wet squeegeeing. The thicknesses differ from type to type. The special adhesive on the back is moisture-resistant.

WrapEdge-00



Thin and strong alcantara. Spreads the squeegeeing pressure evenly. Can be moistened for an even better result. Contains no sponge layer.



The buffers are slightly larger than a standard squeegee, so the squeegee edges don't scratch.



Available in sets of 18, pre-cut in 3 sheets.

WrapEdge-01



Sturdy alcantara with a 1 mm sponge layer. Spreads the squeegeeing pressure ideally. Extremely suitable for chrome, high gloss, and polyester films.



The added 1mm sponge layer makes the squeegee's edge rounder and distributes the pressure over its full width. If necessary, wet the buffer to prevent scratches.



Available in sets of 12, pre-cut in 2 sheets.

WrapEdge-02



Sturdy alcantara with a 2 mm sponge layer. Spreads the squeegeeing pressure ideally. Extremely suitable for chrome, high gloss, and polyester films.



The added 2mm sponge layer makes the squeegee edge thicker and rounder and distributes the pressure over its full width. If necessary, wet the buffer to prevent scratches.



Available in sets of 12, pre-cut in 2 sheets.

WrapEdge-03



Sturdy alcantara with a 3 mm sponge layer. Perfect for wrapping in recesses and over swages as it can easily form the film in and over those areas.



The rounded edge of the squeegee is made thicker and is therefore very suitable for channels in company cars and vans. If necessary, wet the buffer to prevent scratches.



Available in sets of 12, pre-cut in 2 sheets.

WrapEdgeTM
by **SOTT**

WrapEdge-00	0 mm sponge thickness	Part No. 500-037
WrapEdge-01	1 mm sponge thickness	Part No. 500-038
WrapEdge-02	2 mm sponge thickness	Part No. 500-039
WrapEdge-03	3 mm sponge thickness	Part No. 500-040